

Toner a Colori Nuove al 100%



Brother® HL-4000CN
Brother® HL-4200CN
Dell® 1320
Dell® 2130/2135MFP
Dell® 3000cn/3010cn/3100cn
Dell® 5100cn/5110cn
EPSON Aculaser® CX11N/CX11NF/C1100
EPSON Aculaser® C900/C1900
EPSON Aculaser® C4000
EPSON Aculaser® C4100
KONICA MINOLTA™ Magicolor™ 2400 / 2430 / 2450 /
2480MF / 2490MF / 2500 / 2530 / 2550 / 2590MF
KONICA MINOLTA™/ MINOLTA-QMS® Magicolor™ 2300 / 2350
KONICA MINOLTA™/ MINOLTA-QMS® Magicolor™ 3100
KONICA MINOLTA™/ MINOLTA-QMS® Magicolor™ 3300
OKI® C3100 / C3200
OKI® C3300 / C3400 / C3450 / C3520 /
C3530MFP / C3600
OKI® C5100 / C5150 / C5200 / C5250 / C5300 /
C5400 / C5450 / C5510MFP / C5540MFP
OKI® C5500 / C5600 / C5700 / C5800 /
C5900 / C5550MFP
OKI® C5650 / C5750
C5850 / C5950 / MS560MFP
OKI® C7100 / C7200 / C7300 / C7350 /
C7400 / C7500 / C7550
OKI® C9300 / C9500 / C9600 / C9650 / C9800

Ricoh® Aficio® AP3800 & CL7000
Ricoh® Aficio® CL2000 / CL3000 / CL3500
Samsung® CLP-300 / CLX-2160 / CLX 3160
Samsung® CLP-500 / CLP-510 / CLP-550
Samsung® CLP-350
Xerox® Phaser® 1235
Xerox® Phaser® 6100
Xerox® Phaser® 6110 / 6110MFP
Xerox® Phaser® 6120 / 6115MFP
Xerox® Phaser® 6125
Xerox® Phaser® 6128
Xerox® Phaser® 6130
Xerox® Phaser® 6200
Xerox® Phaser® 6250
Xerox® Phaser® 6300 / 6350
Xerox® Phaser® 6360
Xerox® Phaser® 7300
Xerox® Phaser® 7400
Xerox® Phaser® 7700

Cere Solide:



Xerox® Phaser® 8200
Xerox® Phaser® 8400
Xerox® Phaser® 8500 / 8550
Xerox® Phaser® 8560 / 8560MFP
Xerox® WorkCentre® C2424

